




Power Xpress™ Bollard Charge Station Installation Guide





evCHARGE Solutions.com™

CALL US TO ORDER TODAY!

585.533.4051

7464 W. HENRIETTA ROAD | RUSH, NY 14543

Technical Support
USA: 1-877-805-EVSE (3873)

Copyright © 2016 Bosch Automotive Service Solutions Inc.
All rights reserved.

The information, specifications, and illustrations in this guide are based on the latest information available at the time of printing. Bosch Automotive Service Solutions Inc. reserves the right to make changes at any time, without notice.

Table of Contents

1. Installation Safety	2
2. Installation Contents: Bollard and EVSE	2
2.1 Power Xpress EVSE (EL-50600-300) for Bollard Charge Station	2
2.2 Bollard and Hardware (EL-50600-500)	2
3. Tools Suggested for Installation (Not Provided)	3
4. Applicable Electrical Systems	3
4.1 220/240V Single Phase (North America)	3
4.2 208V 3-Phase Wye Connection (North America)	3
4.3 240V 3-Phase Delta Connection (North America) with Center Tap on One Leg	4
4.4 230V Above Ground (Europe) / 230V Single Phase	4
5. Electrical Requirements for Battery Charging	5
6. Amperage and Breaker Parameters	5
7. Standard Installation	6
8. EVSE Power and Status LED Indications	11
9. Troubleshooting	11
9.1 Ground Fault Circuit Interrupt (GFCI) Tripped	12
9.2 Missing Ground	12
10. Limited Warranty	12

1.0 Installation Safety


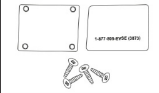

SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

This guide contains important instructions that must be followed during the installation of the electric vehicle supply equipment (EVSE). All instructions should be carefully read before installation of the EVSE.





- ⚠ WARNING:** Turn OFF the circuit breaker at the service or distribution panel before performing any electrical work or repairs.
- ⚠ WARNING:** The EVSE should be installed by a licensed electrician in accordance with all local electrical codes and ordinances, and all authorities having jurisdiction.
- ⚠ WARNING:** Do not install the EVSE near flammable, explosive, or combustible materials. Do not locate or store flammable, explosive, or combustible materials near the EVSE.
- ⚠ WARNING:** Improper installation of the EVSE can result in personal injury or product damage.
- ⚠ WARNING:** This EVSE installation guide is not a substitute for electrical safety precautions.
- ⚠ WARNING:** Use this EVSE within the specified operating parameters. Failure to do so may result in injury or death.
- ⚠ WARNING:** Locate and install this EVSE in a location where the charge cable will not be stepped on, tripped over, or subject to damage or stress.
- ⚠ WARNING:** The EVSE must be connected to a grounded, metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal on the EVSE.
- ⚠ CAUTION:** Incorrect installation of the EVSE can result in damage to the vehicle's battery and to the Charge Station itself. These damages will void the warranty for the vehicle and the EVSE.
- ⚠ CAUTION:** Do not operate the EVSE in temperatures beyond its operating range of -40°F to +122°F (-40°C to +50°C).

2.0 Installation Contents: Bollard and EVSE (EL-50600-300)








 





 
2.1 Power Xpress EVSE (EL-50600-300) for Bollard Charge Station

1	EVSE (including attached cable with strain relief and grommet, input/output decals, flag tag, and vehicle coupler)	
1	Decal and cover kit	
1	Cable-management hook	
1	Power Xpress Bollard Charge Station Installation Guide	

2.2 Bollard and Hardware (EL-50600-500)

1	Bollard (including upper and lower plastic covers)	
2	Cable-management retaining screws (pre-installed)	
1	Locating set screw (plastic bag attached to bollard)	
1	Base cover	

3.0 Tools Suggested for Installation (Not Provided)

	Tape measure		Wire cutters
	2-ft Level		Wire stripper
	Pencil		Nonmetallic wire stripper
	Power hammer drill		Masonry drill bit set
	Small flat-blade screwdriver		Needle-nose pliers
	7/16-in. Open-end wrench		Expandable pliers
	1/2-in. Ratchet and sockets		Torque wrench


4.0 Applicable Electrical Systems

IMPORTANT: The onsite service connection must be properly identified before installation of the EVSE. If you are unsure of the available service connection, consult the local utility company or contact Bosch Electric Vehicle Solutions at 1-877-805-EVSE (3873).

NOTE: The L1, L2, and Ground outputs (H, N for Europe) in the following illustrations correspond to the inputs on the EVSE.

NOTE: For the (earth) ground connection, always connect the neutral at the service panel to earth ground. Ground fault protection is not possible unless the neutral (center tap on the service transformer) is connected to an earth ground.

4.1 220/240V Single Phase (North America)

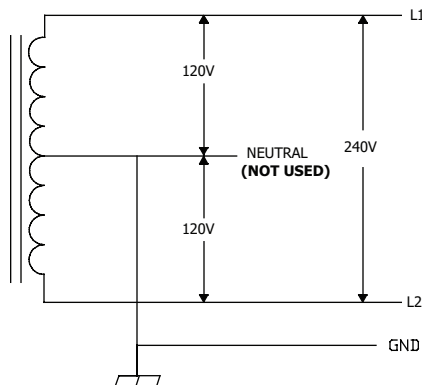


220/240V Single Phase

⚠ WARNING: The EVSE is a single-phase device. Do not connect all three phases of a 3-phase feed. Only three wires are connected, take care that the service transformer secondary connection is known, and the three wires from the main-panel circuit breaker are correctly connected and labeled.

4.2 208V 3-Phase Wye Connection (North America)

Any two of the legs can be used to provide 208V to the EVSE with a Wye-connected secondary. For example, L1 and L2, or L1 and L3, or L2 and L3. Reference the wiring diagram below.

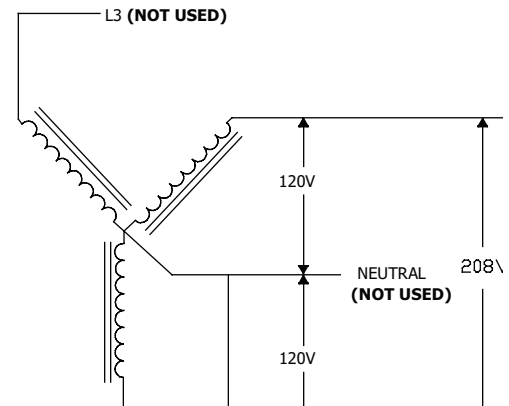

208V 3-Phase Wye Connection


NOTE: A current-carrying neutral is not required for the Charge Station for 208V connections.

⚠ WARNING: The EVSE must be installed by a licensed electrician and in accordance with all local electrical codes, ordinances, and all authorities having jurisdiction.

⚠ WARNING: Do not install the EVSE near flammable, explosive, or combustible materials. Do not locate or store flammable, explosive, or combustible materials near the EVSE.

4.3 240V 3-Phase Delta Connection (North America) with Center Tap on One Leg

One leg must be center-tapped, and only the two phases on either side of the center tap can be used with the delta connection.

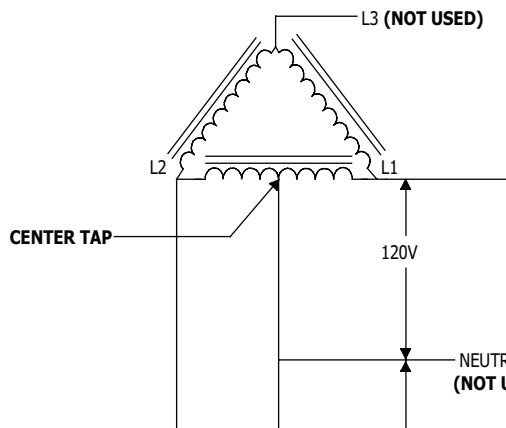

240V 3-Phase Delta Connection

NOTE: The third line (L3 on the illustration of the delta) is 208V, with respect to the neutral, and is sometimes referred to as a "stinger."

⚠ WARNING: Do not use this third line.


NOTE: The two used phases must each measure 120V to neutral or ground.

NOTE: Consult the utility company or the transformer manufacturer's literature to verify that the single leg can supply the required power.

NOTE: The EVSE will only operate properly if it detects the presence of a ground wire connected to a neutral point on the transformer secondary.

⚠ WARNING: Do not use a 3-phase delta-connected transformer secondary without a center tap on one leg and/or without a neutral point available for the required ground connection.

4.4 230V Above Ground (Europe) 230V Single Phase

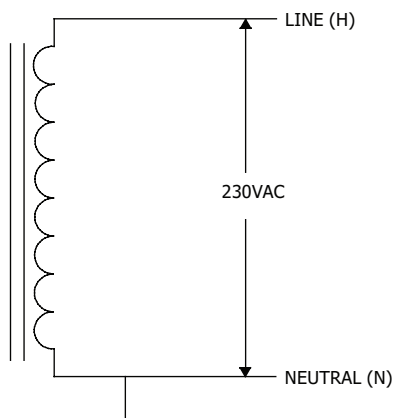


230V Single Phase

⚠ WARNING: The EVSE is a single-phase device. When connecting the line and neutral wires, take care that the service transformer secondary connection is known, and the wires from the main circuit breaker panel are correctly connected and labeled. The following service connections are primarily used in Europe and Australia (sometimes known as "TT Power Grid"). Please reference the following diagram. The line, neutral, and earth outputs on the illustration correspond to the inputs on the EVSE.

⚠ WARNING: The line connection must measure 230V RMS to neutral. Earth must also be connected to the EVSE.

5.0 Electrical Requirements for Battery Charging

⚠ CAUTION: The AC electrical connection must have a grounded, dedicated service-main. No other loads shall be connected to the same circuit. Use of a non-dedicated circuit could exceed the current rating of the circuit breaker and cause it to trip or open.

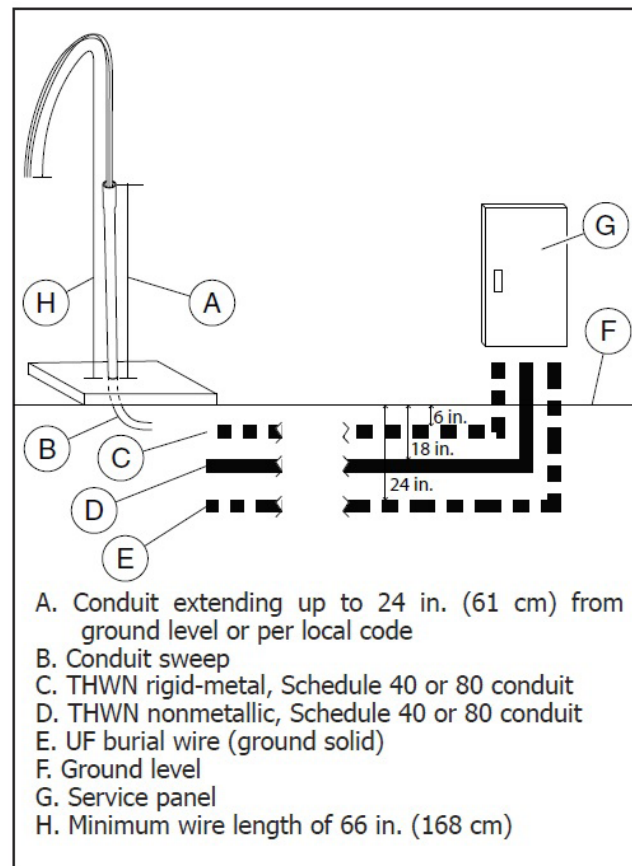


- ⚠ WARNING:** The EVSE must be installed by a licensed electrician in accordance with all national and local electrical codes, ordinances, requirements and all authorities having jurisdiction.

The conduit may extend up to 24 in. (61 cm) from ground level. The wiring should extend 66 in. from the base mounting of the bollard. A sweep is used to direct the circuit from the conduit to the electric circuit from the service panel. The three types of acceptable wire runs are:

- THWN rigid metal Schedule 40 or 80 conduit, buried 6 in. (15 cm) below ground level, or per local electrical code.
- THWN nonmetallic Schedule 40 or 80 conduit, buried 18 in. (46 cm) below ground level, or per local electrical code.
- UF burial wire (ground solid), buried 24 in. (61 cm) below ground level, or per local electrical code.
- THHN, THWN, or THWN-2 wires are recommended to allow for proper space requirements inside the 1/2 in. flexible conduit required in-side the bollard.

6.0 Amperage and Breaker Parameters: Field Requirements and Adjustments for EVSE Installation (Not Required for 40 Amp Circuit Installation)


1. Unpack the EVSE.

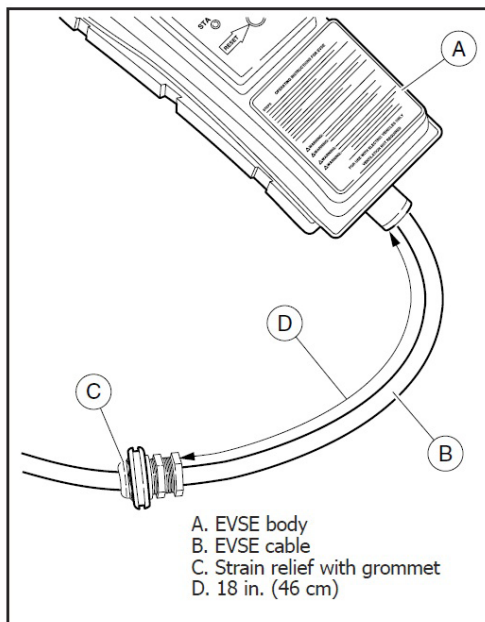

NOTE: The EVSE has been factory set at 30 amp output for a 40 amp circuit. Proceed to “Standard Installation” if installing on a 40 amp circuit. For all other amperages, complete Steps 2 and 3 for EVSE adjustment.

2. Remove the domed cap from the current-adjustment selector (positioned just above the reset button on the front of the EVSE).

3. Using a small, flat-blade screwdriver, set the current-adjustment selector to the applicable output current-limiting setting as specified in “Figure 8. Current-Adjustment Settings”.

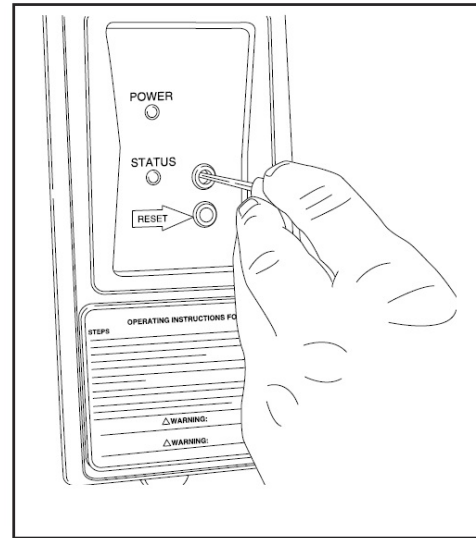


NOTE: Positions 6, 7, 8, 9, 0 are not used (X) and are non-operational. The EVSE will not function under these settings.

- ⚠ WARNING:** The EVSE setting cannot exceed ampacity ratings of field service wires or branch circuit protectors.

- ⚠ WARNING:** See “output” specification label located on the side of the EVSE for maximum amperage setting, per limitations of vehicle cable and coupler.


NOTE: The EVSE must be de-rated to match line service power limitations.

- ⚠ CAUTION:** Use 75°C (600V) approved wire, conductor temperature at 30°C ambient in wet or dry locations.

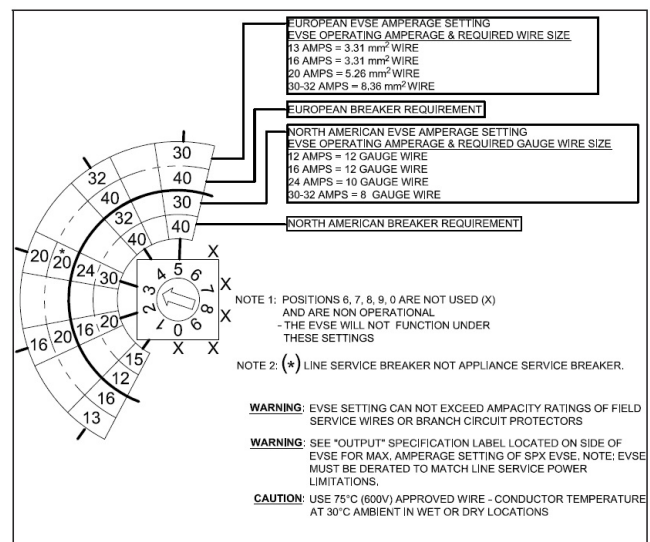

7.0 Standard Installation



1. Lay down the bollard box and remove the banding.
2. Lift the top off the box and remove the bollard from the packaging material.
3. Remove the upper cover from the bollard assembly by removing the cable-management retaining screws (E) on the rear of the bollard.
4. Remove plastic bag containing locating set screw (not shown) from inside bollard.

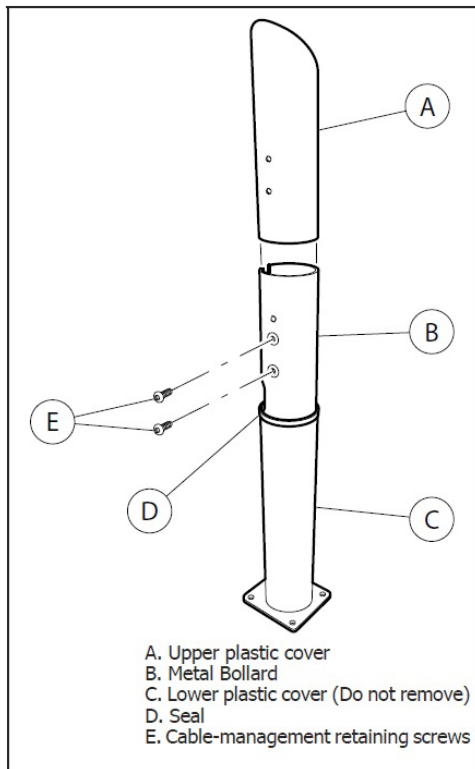

NOTE: The upper and lower plastic bollard covers are a matched set and cannot be used inter-changeably with those from other bollards.

The standard installation design for the Power Xpress Bollard is a bolt-down external plate.

The standard diameter of the bollard is approximately 7 in. The bollard height will vary with the application.

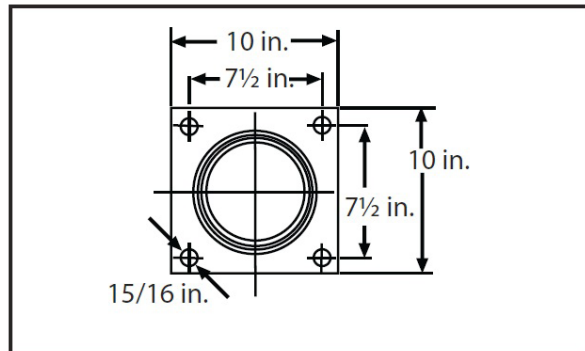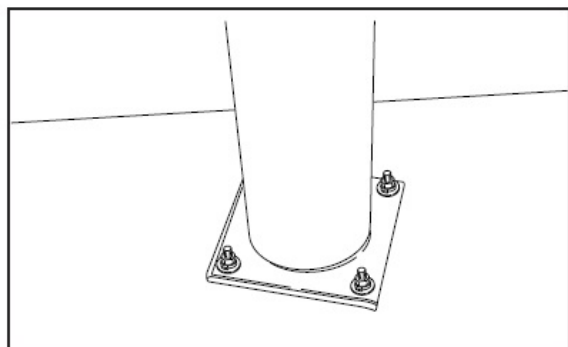


CAUTION: Read all instructions before installing the EVSE.

WARNING: Main service power must be off and disconnected before attempting to install the EVSE.

WARNING: The bollard weighs 20 lb per foot, and the bottom end is significantly heavier than the top end. Take proper precautions and use safe lifting practices when lifting the bollard.

CAUTION: All adapter and connection fittings must be classified as liquid-tight. The following types of flexible conduit are recommended: LFMC (liquid-tight flexible metal conduit), LFNC-B (liquid-tight flexible nonmetal conduit), or LFNC-A (liquid-tight flexible nonmetal conduit).

5. Place the bollard where it is to be installed and drill holes.
6. Install the 3/4 in. anchor bolts in accordance with industry standards for the type of mounting being performed.

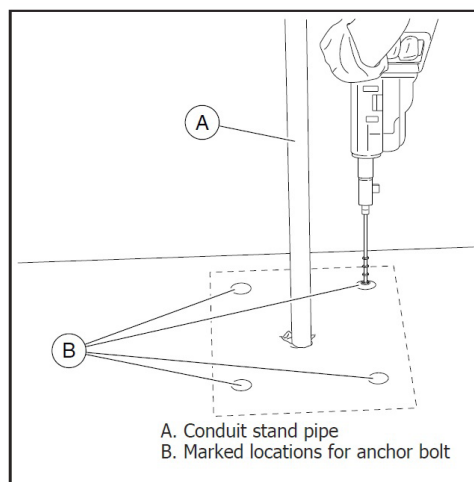


NOTE: Depending on the type and size of the conduit stand pipe, a variety of adapters may be used to convert the stand pipe to 1/2-in. liquid-tight flexible conduit.


7. Slide the wires through the required adapters and the 1/2-in. liquid-tight flexible conduit.

8. Install 1/2-in. liquid-tight flexible conduit to the conduit stand pipe.

NOTE: Consult national and local codes for approved, liquid-tight flexible conduit.

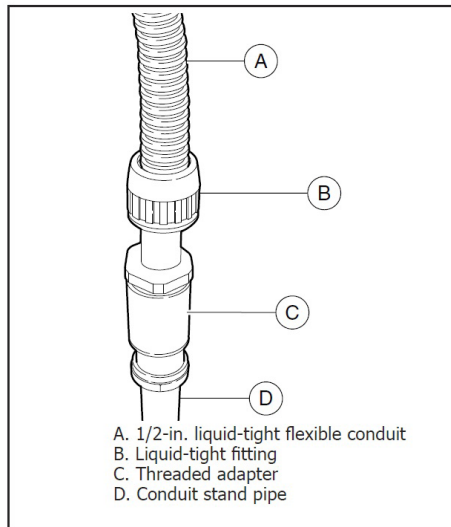


9. Place the bollard on its side.
10. Gently guide the conduit through the bottom of the bollard and position the bollard over the bolts and onto the base.

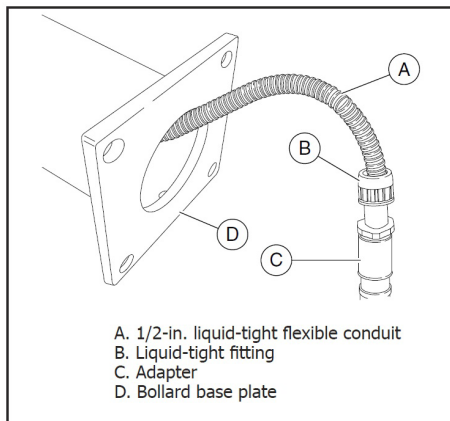


11. Use a level on two sides (90° apart) of the bollard to check whether the bollard is standing straight.
12. If the bollard is not plum and level, remove the bollard and place washers on the lag bolts as needed to level the bollard.
13. Repeat Steps 7 and 8 until the bollard is level.
NOTE: Alternately, double-nut leveling installation is acceptable.


14. Install a washer, lock washer, and nut on each bolt.

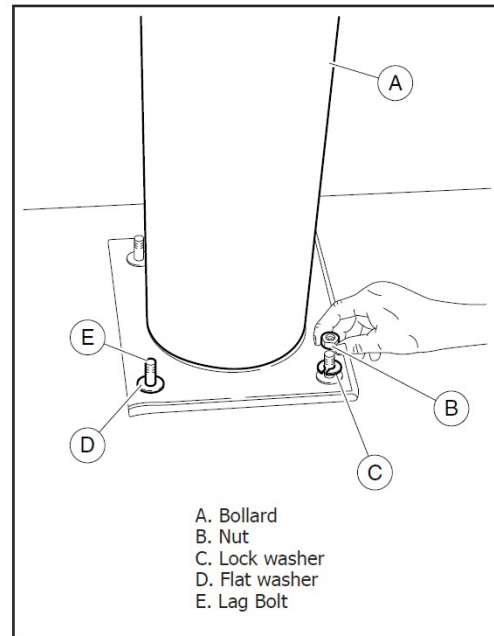


15. Tighten the nuts evenly around the bollard. Any gap between the bollard base and the mounting surface may be filled with caulk suitable for the installation environment.
16. Position the conduit on the left side of the bollard (opposite the open metal slot side).

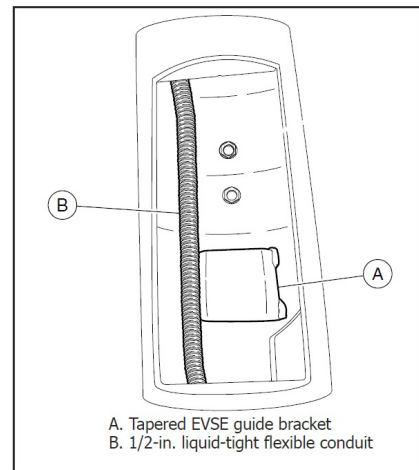


17. Gently guide the EVSE body down through the bollard until it rests on the top of the tapered guide bracket.

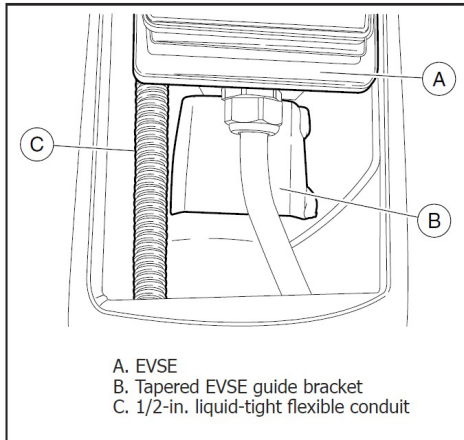

18. Mark 1/2-in. liquid-tight flexible conduit for length based on the required radius bend to attach to the top of the EVSE.

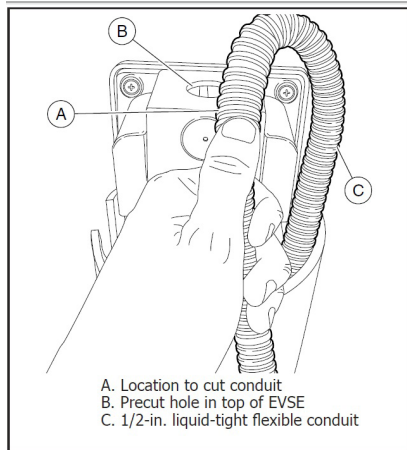


19. Cut 1/2-in. liquid-tight flexible conduit to length. Do not cut wires.
20. Install approved, liquid-tight fittings to attach 1/2-in. liquid-tight flexible conduit to top of EVSE.

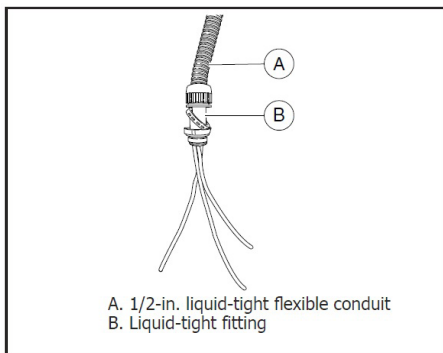


NOTE: All connections must be liquid-tight.


21. Feed wires into the hole in the top of the EVSE and attach 1/2-in. liquid-tight flexible conduit with a liquid-tight fitting.

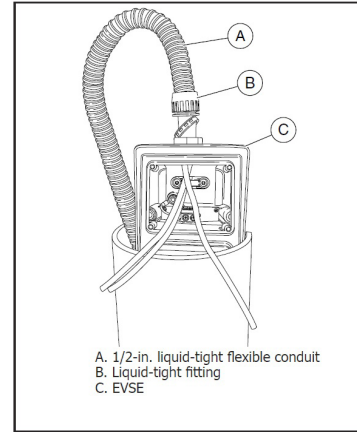


22. Cut wires to length.
23. Strip wires and wire them into the EVSE. Refer to label on inside of EVSE cover or details on circuit board. Torque terminal screws to 10.62 ± 1 in-lb (1.2 ± 0.12 Nm).

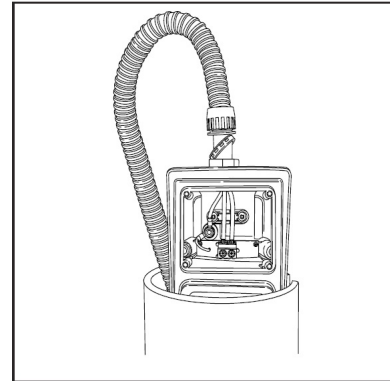

24. Install EVSE cover.

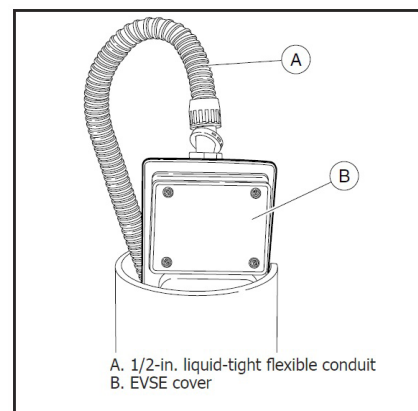

25. Apply decal to the front of the EVSE cover.
26. Continue lowering the EVSE until the front edge of the EVSE bottom cover rests on the ledge in the bollard front opening.

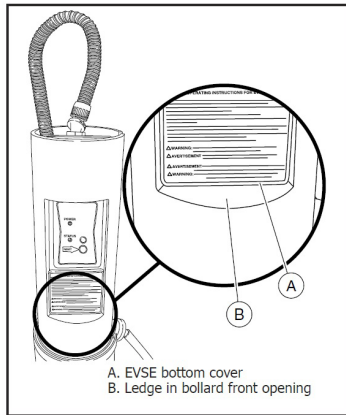


⚠ WARNING: The lower edge of the EVSE bottom cover must rest on the ledge of the bollard. Failure to position the EVSE correctly in the opening will cause damage to the EVSE when the locating set screw is tightened.

⚠ WARNING: Never use any other size set screw to secure the EVSE in place. If the set screw is too long, it will prevent installation of the upper cover.


27. Push any excess conduit down into the bollard. A loop will extend above the bollard and fit in the top cover.




28. Install the locating set screw to 50 ± 5 in-lb (5.5 ± 0.55 Nm).

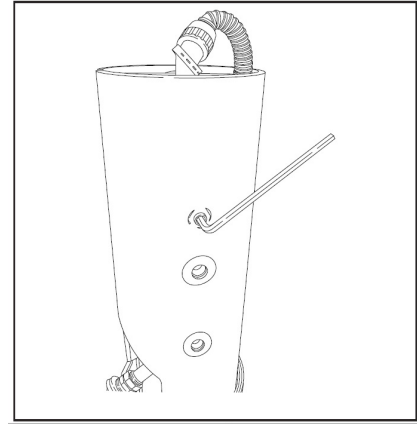

29. Position the strain relief at the bottom of the side slot metal mounting bracket in the steel bollard. Position such that the rubber grommet (D) seats on the opening of the lower plastic bollard cover.

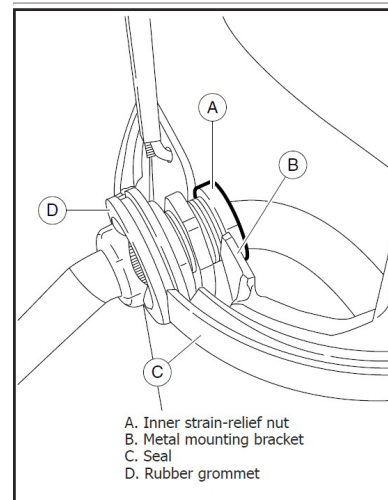


30. Tighten the inner strain-relief nut (A) inside the bollard hand tight. Using expandable pliers, tighten the nut an additional 1/4 turn.

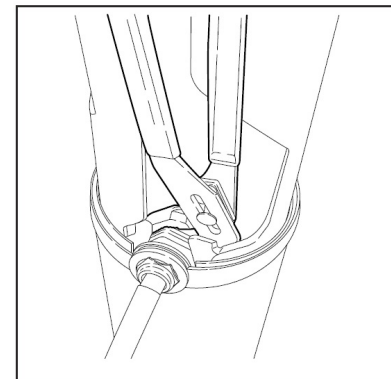


NOTE: Do not overtighten the strain-relief nut. The grommet may pull through.

31. Carefully lower the upper plastic cover down onto the bollard base.

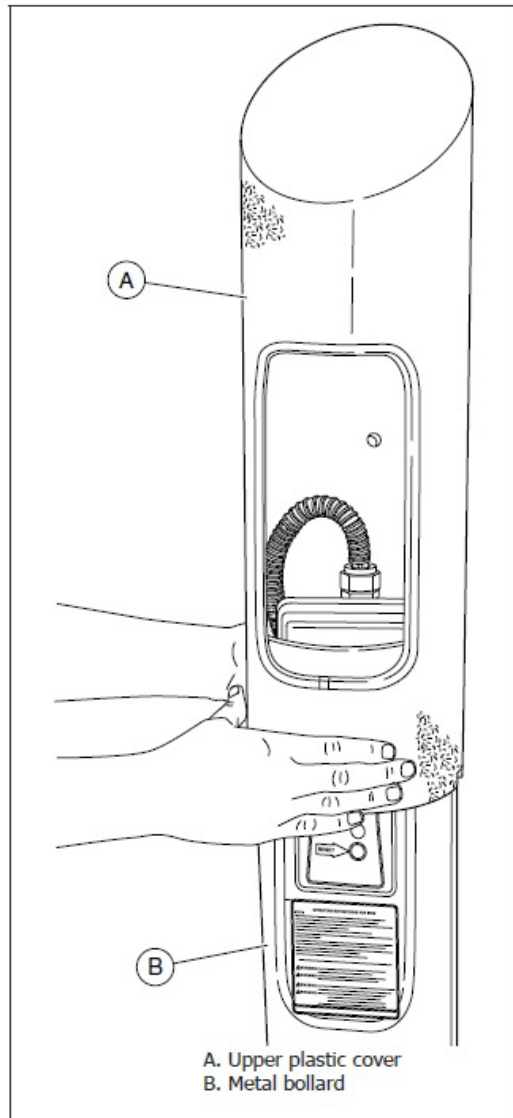

32. Use a small flat-blade screwdriver or similar tool to guide the upper plastic cover into the seal.

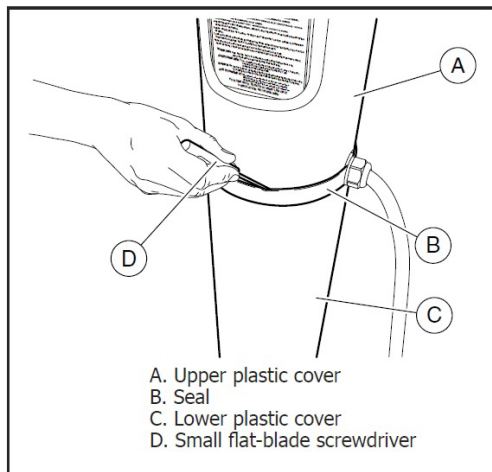

33. While gently pressing down on the upper plastic cover, carefully slide the screwdriver around the bollard to extend the upper lip of the seal over the upper plastic cover. The upper cover may need to be tapped gently to fully seat it in the seal.

CAUTION: Use care not to cut or damage the seal during this procedure.

NOTE: When the upper plastic bollard cover is fully seated, the rear cable-management holes will be in line with the threaded holes in the steel portion of the bollard base and the rubber cable grommet will be centrally located with respect to the rubber seal. Verify the cable-management holes and the rubber cable grommet are each properly aligned.


















 

34. Use a 5/16-in. hex-head wrench to install the rear cable-management hook with the two cable-management retaining screws. The torque on the cable-management retaining screws should be 60 ± 5 in-lb (6.8 ± 0.55 Nm).
35. Loop the cable onto the cable-management holder.






36. Switch the main circuit breaker to the ON position and verify that the Power LED is illuminated solid green and the Status LED is illuminated solid amber on the EVSE.



8.0 Power and Status LED Indications

Power LED	Status LED	Condition
(Off) 	(Off) 	No service supply power
Green solid 	Amber solid 	Charge Station powered; vehicle coupler not connected
Green solid 	Green solid 	Waiting to charge
Green solid 	Green flashing 	Vehicle charging
Green solid 	1–2 red flashes every 2 seconds 	Pilot charging error*
Green solid 	Solid red, then green flash every 2 seconds  	Ground fault detected*
Green solid 	Red flashing 	Ground monitor interrupted*
Green solid 	Red solid 	Operation fault*
Green solid 	(Off) 	Operation fault*

*See "Troubleshooting" for suggested solutions.

-  - No illumination
-  - Solid illumination
-  - Flashing illumination

9.0 Troubleshooting

If there is a charging issue proceed with the following steps. If the issue persists after three attempts call Bosch at 1-877-805-EVSE (3873) for assistance.

Problem Indicated by LED Status	Solution
Pilot charging error	<ol style="list-style-type: none"> 1. Verify supply-side power. The green POWER LED should be on. If green POWER LED is off, locate load center/panel and reset breaker. 2. Press the master clear RESET button on the front panel of the Charge Station to attempt a charge-restart. 3. If the red STATUS LED remains on, disconnect the Charge Station coupler from the vehicle charge port, wait 10 seconds, and reconnect the coupler.
Ground fault detected	<ol style="list-style-type: none"> 1. Disconnect main service power at service panel. 2. Disconnect the Charge Station coupler from the vehicle. 3. Inspect the Charge Station connector and the vehicle charge port verifying both are clean and undamaged. If vehicle charge port needs cleaning, follow manufacturer instructions for cleaning. Clean Charge Station connector with a dry or damp cloth if necessary. 4. Restore main service power. 5. Reconnect the coupler to the vehicle port.
Ground monitor interrupted	<ol style="list-style-type: none"> 1. Disconnect main service power at service panel. 2. Disconnect the Charge Station coupler from the vehicle. 3. Inspect the Charge Station connector and the vehicle charge port verifying both are clean and undamaged. If vehicle charge port needs cleaning, follow manufacturer instructions for cleaning. Clean Charge Station connector with a dry or damp cloth if necessary. 4. Restore main service power. 5. Reconnect the coupler to the vehicle port.

Problem Indicated by LED Status	Solution
Operation fault	<ol style="list-style-type: none"> 1. Verify supply-side power. The green POWER LED should be on. If green POWER LED is off, locate load center/panel and reset breaker. 2. Press the master clear RESET button on the front panel of the Charge Station to attempt a charge-restart. 3. If the red STATUS LED remains on, disconnect the Charge Station coupler from the vehicle charge port, wait 10 seconds, and reconnect the coupler.

9.1 Ground Fault Circuit Interrupt (GFCI) Tripped

If the Charge Station detects a ground fault, power will be interrupted and the STATUS LED will illuminate (red flash with intermittent green). The Charge Station will attempt to reset automatically and re-attempt charging (see note below on European models). If the fault condition persists after an initial automatic attempt, per the code, the Charge Station waits 15 minutes before a second attempt is made. A total of four attempts will be made to restore vehicle charging. If the charging mode cannot be restored, the STATUS LED will illuminate solid red, and the unit will stay in fault mode.

NOTE: European models—Automatic reset feature after ground fault (STATUS LED will be solid red) does not apply to European models. European standards dictate that user intervention is required by pressing the master clear RESET button on the front of the Charge Station housing. If ground fault condition clears, Charge Station will resume charging.

9.2 Missing Ground

If the Charge Station detects a missing ground connection (rapid red flashing LED), power will be interrupted and the unit will not be capable of charging vehicle until a ground connection has been detected. Disconnect service power (breaker) and disconnect vehicle coupler from vehicle and contact a qualified Bosch technician to validate the presence of a proper ground.

10.0 Limited Warranty

THIS LIMITED WARRANTY IS EXPRESSLY LIMITED TO THE ORIGINAL PURCHASER ("PURCHASER") OF THE BOSCH POWER XPRESS LEVEL 2 CHARGING STATION WITH BOLLARD ("CHARGING STATION"). THE BOLLARD IS THE DECORATIVE PLASTIC CASING, STEEL HOUSING AND BASE COVER.

IMPORTANT: It is the Purchaser's obligation to register the Charging Station with Bosch and failure to do so may delay warranty support. To register a Charging Station online, go to BoschEVSolutions.com or call 1-877-805-3873 for assistance.

Bosch Automotive Service Solutions Inc. ("Bosch") warrants to the Purchaser that the Charging Station will be free from defects in materials and workmanship for the warranty period specified below ("Warranty Period"). This warranty is valid for purchasers located in the U.S.A. and Canada only.

Charging Station excluding Bollard: 3 years

Bollard only: 1 year

ALL WARRANTY CLAIMS MUST BE MADE WITHIN THE WARRANTY PERIOD AND PROOF OF PURCHASE ACCEPTABLE TO BOSCH MUST BE SUPPLIED.

The sole and exclusive remedy for any Charging Station found to be

defective is repair or replacement, at the option of Bosch. The warranty covers both parts and factory labor necessary to repair the Charging Station, but does not include any on-site labor costs related to un-installing or reinstalling the repaired or replacement Charging Station. This warranty does not cover cosmetic damage such as scratches and dents, or normal aging. Repair parts and replacement Charging Stations may be either new or reconditioned at Bosch's discretion. Any replacement Charging Stations so furnished will be warranted for the remainder of the original Warranty Period. Should Bosch be unable to repair or replace the Charging Station with a comparable Bosch product of Bosch's choice, Bosch will refund the purchase price of the Charging Station to you.

This warranty does not cover the cost of freight to return the Charging Station to Bosch. This warranty does include freight to ship repair parts and/or a replacement Charging Station to the Purchaser, using a shipping carrier of Bosch's choice.

This warranty covers only those defects that arise as a result of normal use of the Charging Station and does not cover Charging Stations subject to improper installation, improper connections with peripherals, external electrical faults, accident, disaster, misuse, abuse, neglect, improper maintenance and care, modification, disassembly, operation outside of the Charging Station specifications or in a manner inconsistent with instructions regarding use. This warranty does not apply if the Charging Station's original identification markings (for example, serial numbers and trademarks) have been defaced, altered or removed. The Charging Station is not certified for plugin applications and any modification to create a plugin application will void this warranty.

The existence of a defect shall be determined by Bosch in accordance with procedures established by Bosch. No one is authorized to make any statement or representation altering the terms of this warranty.

This warranty gives the Purchaser specific legal rights. The Purchaser may also have other rights which vary from state to state. To the extent that this warranty is inconsistent with applicable law, this warranty will be deemed modified to be consistent with such local law.

Disclaimer

TO THE EXTENT PERMITTED BY APPLICABLE LAW AND EXCEPT AS EXPRESSLY PROVIDED IN THE LIMITED WARRANTY, BOSCH MAKES NO WARRANTY WITH RESPECT TO THE CHARGING STATION, WHETHER EXPRESS, IMPLIED, STATUTORY OR OTHERWISE. BOSCH EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. BOSCH DOES NOT WARRANT UNINTERRUPTED OR ERROR FREE OPERATION OF THE CHARGING STATION.

Limitation of Liability

TO THE FULLEST EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL BOSCH, ITS AFFILIATES OR ITS SUPPLIERS BE LIABLE FOR ANY, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY EVEN IF BOSCH AND ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages for some products, so the limitations or exclusions contained herein may not apply.

To Obtain Warranty Service

To obtain warranty service during the Warranty Period, the Purchaser may contact Bosch Technical Support Services (TSS) at 1-877-805-3873 or email to oetech@service-solutions.com for assistance. A Bosch TSS agent will troubleshoot the Charging Station and determine if it has a defect, and if it is covered under this warranty.


In connection with a warranty inquiry, you will be asked for each of the following:

1. Your name and address;
2. A detailed description of the problem you are experiencing with the Charging Station;
3. The model number and serial number of the Charging Station;
4. Proof of purchase; and
5. Return Shipping information.

If Bosch confirms a defect covered under this warranty, you will:

- Obtain a Return Goods Authorization Number (RGA#) number from Bosch;
- Directed to ship the Charging Station, at your expense, in accordance with the instructions provided by Bosch, in either its original package or packaging providing the Charging Station with a degree of protection equivalent to that of the original packaging, to Bosch at the address so instructed at that time.
- You agree to obtain adequate insurance to cover loss or damage to the Charging Station during shipment and you understand prior to receipt by Bosch, you assume risk of any loss or damage to the Charging Station.
- If the Charging Station is covered under this warranty, Bosch will either repair or replace the defective Charging Station at no charge to you and ship the repaired or replaced Charging Station back to you at Bosch's expense, using a carrier of Bosch's choice.
- Any Charging Station that is found by Bosch to be out-of-warranty or otherwise ineligible for warranty service will be repaired or replaced upon your approval and payment of Bosch's standard charges.
- Bosch is not responsible for any unauthorized shipments to Bosch, and under no obligation to return the Charging Station, at its expense. If you do not contact Bosch within five (5) business days of its delivery, Bosch will dispose of the shipment in a manner of its choice without any liability to you. Any damage incurred returning an unauthorized shipment back to you is not Bosch's responsibility.

This warranty is not transferable to subsequent owners of the Charging Station. No attempt to alter, modify, or amend this warranty shall be effective unless authorized in writing by an officer of Bosch. This warranty shall be governed by and construed in accordance with the laws of the State of Michigan U.S.A., exclusive of its conflict of laws principles. The U.N. Convention on Contracts for the International Sale of Goods shall not apply. Bosch reserves the right to amend this warranty policy as required.



CALL US TO ORDER TODAY!

585.533.4051

7464 W. HENRIETTA ROAD | RUSH, NY 14543